

PAIRING HELP

VEHICLE: EVOQUE - VIN : Latest Tested Version



Samsung GT-I8700 Omnia 7

Hands-Free Call	Phonebook Use	Auto-Connection
✓	✓	✓
Call lists	Incoming Caller ID	Music Control
✗	✓	✓



Main Features

Comments

Last call lists are not updated correctly.

Connection

- ✓ Handset can be paired and connected using the vehicle system
- ✓ Handset can be paired and connected using the handset
- ✓ Handset will connect automatically when vehicle system is switched on
- ✓ Handset can be removed from the vehicle system device list
- ✓ Handset will disconnect and is ready for subsequent calls when vehicle system is switched off
- ✓ Active call is transferred to handset when vehicle system is shut down
- ✓ Handset can be connected via vehicle system
- ✓ Handset will reconnect and active call is transferred to the vehicle system when system is switched on

Phonebook & Call Lists

- ✓ Phonebook is automatically downloaded to the vehicle system
- ✗ SIM contacts are downloaded to the vehicle system
- ✓ Handset contacts are downloaded to the vehicle system
- ✗ Last dialled calls are synchronized when the handset is connected
- ✗ Last received calls are synchronized when the handset is connected
- ✗ Last missed calls are synchronized when the handset is connected

Calls can not be made from the vehicle call lists.

Last call lists are not updated correctly.

Only contacts stored in the handset are displayed in the vehicle system (no SIM contacts).

Vehicle phonebook does not display all contact numbers stored within a single contact on the handset.

Outgoing Calls

- ✓ Dial a number using the vehicle system
- ✓ Dial a number from the vehicle system phonebook

Incoming Calls

- ✓ Accept a call from the vehicle system
- ✓ Reject a call from the vehicle system
- ✓ Caller ID is displayed when receiving an incoming call

During an incoming call the ringtone can be heard over the loudspeakers but the handset rings as well.
Handset ringtones (portable in-band ringtones) can not be selected from the vehicle system.

In Call

- ✓ Mute/Unmute the microphone from the vehicle system
- ✓ Transfer an active call from handsfree to handset using vehicle system
- ✓ Transfer an active call from handset to handsfree using vehicle system
- ✓ Adjust volume using the vehicle system

Music

- ✓ Audio device will pair and connect with the vehicle system
- ✓ Audio device will connect automatically when vehicle system is switched on
- ✓ Audio device will disconnect and is ready for subsequent music playing when vehicle system is switched off
- ✓ Audio device will start playback when vehicle is switched on
- ✓ Music playback is paused during an incoming call
- ✓ Music can be played and paused using the vehicle system
- ✓ Music playback is resumed after an active call is ended
- ✓ Music tracks can be skipped forward and back using the vehicle system

Additional Features

Comments

Last call lists are not updated correctly.

Connection

- ✓ Handset name is discovered by vehicle system during pairing
- ✓ Vehicle system screen shows error message if a wrong passkey is entered
- ✓ Message is shown in the screen if session for pairing expires.
- ✓ Handset signal strength is displayed on vehicle systems screen when handset is connected
- ✓ Vehicle screen shows no handset is connected when Bluetooth is turned off in the handset
- ✓ Vehicle screen shows no handset is connected when handset is taken out of the Bluetooth range
- ✓ Handset battery meter is displayed on vehicle systems screen when handset is connected
- ✓ Vehicle system name is shown in the handset as Jaguar XJ

Phonebook & Call Lists

- ✗ Multiple numbers stored for a single contact are downloaded to the vehicle phonebook.
- ✗ Last ten dialled call list is updated when a call is made
- ✗ Last ten received call list is updated when a call is received
- ✗ Last ten missed call list is updated when a call is missed

Calls can not be made from the vehicle call lists.

Last call lists are not updated correctly.

Only contacts stored in the handset are displayed in the vehicle system (no SIM contacts).

Vehicle phonebook does not display all contact numbers stored within a single contact on the handset.

Outgoing Calls

- ✓ Dial a number from the handset when connected to vehicle system
- ✓ When a call fails the number remains on the vehicle system screen for redial
- ✓ Own number is sent or hidden according to phone settings
- ✗ Dial a number from vehicle system call list

Incoming Calls

- ✓ Accept a call using the handset when connected to the vehicle system
- ✗ Handset ringtone is suppressed when receiving and incoming call
- ✗ Ring tone selected in handset can be heard when receiving incoming call



During an incoming call the ringtone can be heard over the loudspeakers but the handset rings as well.

Handset ringtones (portable in-band ringtones) can not be selected from the vehicle system.

In Call

- ✓ Send DTMF tones via vehicle system
- ✓ Handset can be connected using the vehicle system during a call
- ✓ Transfer an active call from handsfree to handset using handset
- ✓ Transfer an active call from handset to handsfree using handset
- ✓ Mute and unmute a call using handset
- ✓ Active call is transferred to handset when out of Bluetooth range

Quick Start Guide

Pairing Handset instructions are next to  and vehicle instructions are next to 



Select "Phone" from the home screen

Select "Search new"

Select "Pair and connect" next to your phones name



NOTE: During pairing please use the PIN code which is displayed on the vehicle system screen.

Connect



Select "Phone" from the home screen

Select "Change phone"

Select "Connect" next to your phones name

Disconnect



Select "Phone" from the home screen

Select "Settings"

Select "Disconnect"

Removing Pairing



Note: Handset has to be disconnect from phone and audio menus before pairing can be deleted from the vehicle system.

Select "Phone" from the home screen

Select "Change phone"

Select "Delete" for your phone's name

Bluetooth Activity Indicator



When phone is connected the Digital Dial screen is displayed

When the phone is not connected "Connected phone: none" is displayed on the phone screen view.