

Rear Seat - Vehicles With: 40/20/40 Split Seat (78.10.70/78.10.71)


Removal

1 . NOTE :

The Torx bolts can be re-used.

Release the rear seat.

- ▶ Remove the front 2 Torx bolts.
- ▶ Fold the seat assembly forwards.
- ▶ Disconnect the electrical connector.
- ▶ Remove the rear 2 Torx bolts.

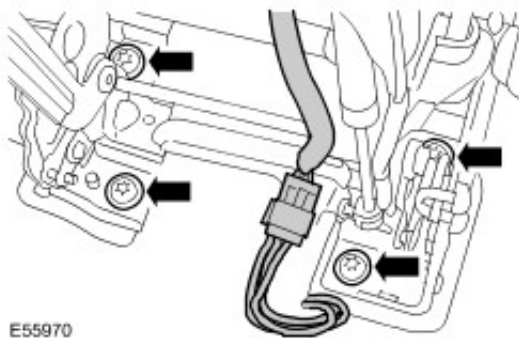

2 . Remove the rear seat assembly.

Installation

1 . Install the rear seat assembly.

2 . Secure the rear seat.

- ▶ Connect the electrical connector.
- ▶ Tighten the rear Torx bolts to 45 Nm (33 lb.ft).
- ▶ Fold seat assembly rearwards.
- ▶ Tighten the front Torx bolts to 45 Nm (33 lb.ft).