Cool Box Page 1 of 2

Published: Dec 2, 2004

Cool Box

Removal

1 . Disconnect the battery ground cable. For additional information, refer to : Battery, Mounting and Cables, 414-01.

2 . Remove the floor console upper panel. For additional information, refer to : Instrument Panel and Console, 502-12.

3. Remove the floor console lid.


Open the lid.

Remove the 2 Torx bolts.

Remove the 2 covers.



- 4. Remove the floor console cool box.
 - Remove the 2 Torx screws.
 - Disconnect the electrical connector.

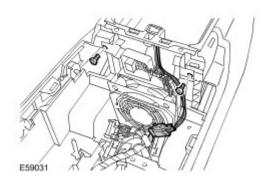

Installation

- 1 . Install the floor console cool box.
 - Connect the electrical connector.
 - Tighten the screws.

Cool Box Page 2 of 2

- 2. Install the floor console lid.
 - Install the covers.
 - Tighten the Torx bolts to 3 Nm (2 lb.ft).
- 3 . Install the floor console upper panel. For additional information, refer to : Instrument Panel and Console, 502-12.
- 4 . Connect the battery ground cable. For additional information, refer to : Battery, Mounting and Cables, 414-01.