

thesettler



Joined: 11 Mar 2007

Location: Adelaide Hills

Posts: 11




Hi All,

I was looking for some information on how to change the air filter on my TDV6 and couldn't find anything that explains how to do it. I was a bit puzzled by the fact that the actual air filter housing is screwed in place. The air channel that comes off the air filter seemed all very rigid and it wasn't obvious how the lid of the air filter housing would actually come off. I am sure most of you would have worked it out by now and this post is really for those paranoids (like me) who don't want to break anything.

Here it goes:

Step1: Use a 8mm spanner to undo the two No1 screws. You need to remove them all the way and put the in a safe place.

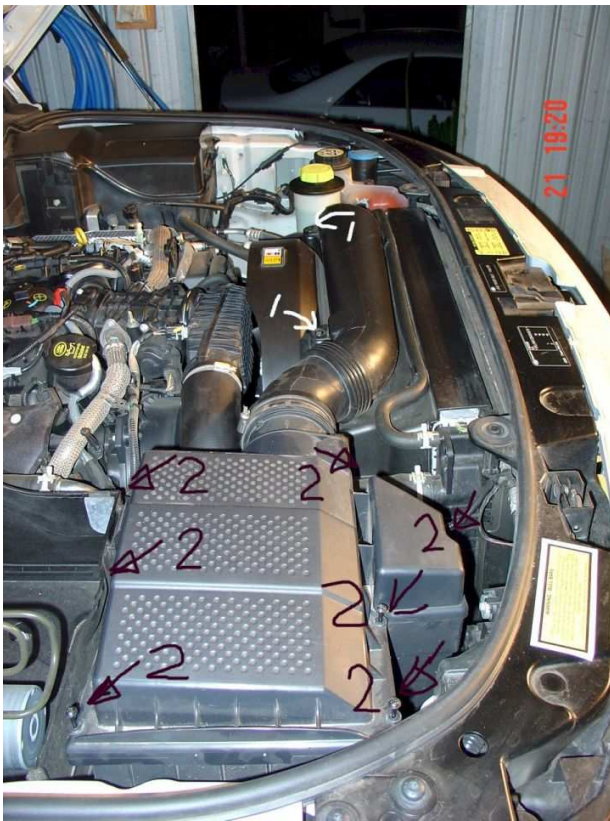

STEP 1, STEP 2



STEP 3

Step2: Use a philips head screw driver to remove the 7 No2 screws. These do not have to be removed all the way. Just undo them until they seem loose. They remain in the lid.

Step3: Simply lift the whole lid with air channel. In the picture you can see I was able to do this with one finger.

That's it's. Now you can take out the air filter and clean it or replace it. Undo the steps in reverse order to complete the job.

cheers

Stefan