Published: May 13, 2004

Front Door Trim Panel (76.34.01)

Removal


1.




CAUTION: Release the 2 lower clips first, use the access holes.

Remove the grab handle cover.


Release the 4 clips.

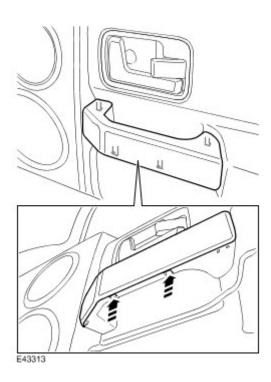

- 2 . Release the front door trim panel.
 - Release the 2 screw covers.
 - Remove the 8 screws.
 - Release the 12 clips.

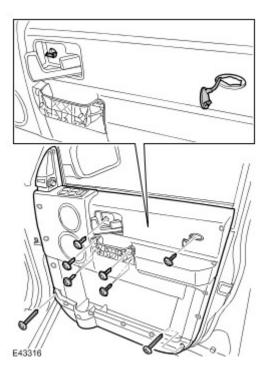


3 . Disconnect the door latch remote release cable.

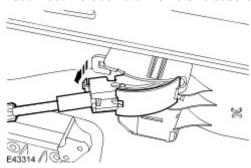

4 . Remove the front door trim panel.

Disconnect the 7 electrical connectors.

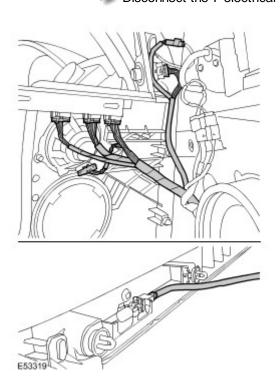


5 . **NOTE:**

Do not disassemble further if the component is removed for access only.


Remove the front door latch remote control handle.

Starting at the lower edge, carefully release the remote handle.

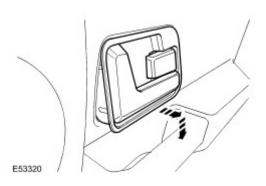

6 . Remove the puddle lamp.

Carefully release the lamp.

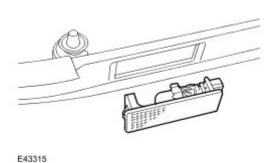


7. Remove the tweeter.

Release the 3 clips.


8 . Remove the mirror control switch.

Release the 2 clips.

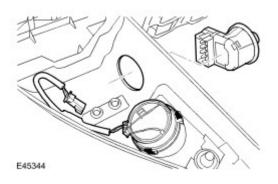


9 . Remove the speaker.

Remove the 3 Torx screws.

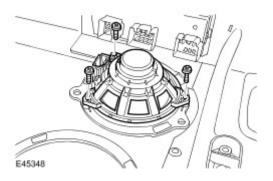

10 . Remove the window control switch.



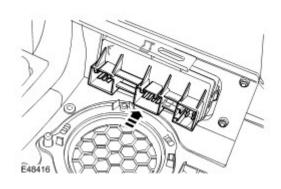

11 . Remove the 12 clips.



Installation

- 1 . Install the window control switch.
 - Secure with the clips.
- 2. Install the speaker
 - Tighten the Torx screws.
- 3. Install the mirror control switch.
 - Secure with the clips.
- 4. Install the tweeter.
 - Secure with the clips.
- 5. Install the puddle lamp.

- 6. Install the front door latch remote control handle.
- 7. Install the clips.
- 8 . Install the front door trim panel.
 - Connect the electrical connectors.
 - Connect the door latch remote control cable.
 - Secure with the clips.
 - Tighten the screws.
 - Install the screw cover.
- 9 . Install the grab handle cover.