


Remove side cap from both sides.

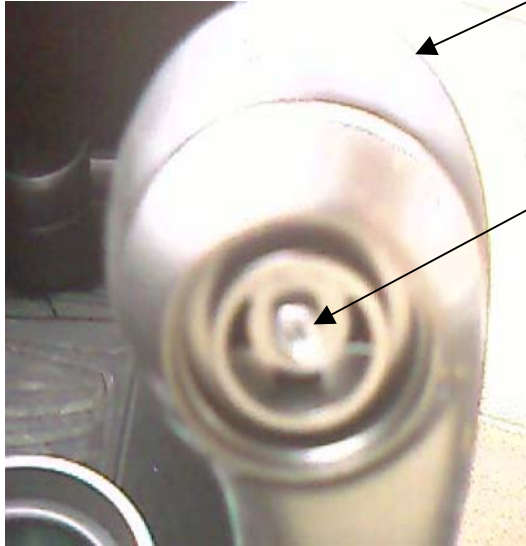

Centre piece pulls upwards.



Unscrew Phillips screw from both sides of the gear knob this will release the centre piece of the gear knob arrowed.



Remove Phillips screws from both sides of the gear knob.



The centrepiece of the gear knob slides out upwards and left with this part.

This is the part where I had the problem. I could not unscrew or lift the centrepiece of the gear lever.

So had to reassemble everything back together. If anyone has any bright ideas then please let me know cause that's how far I got with it.