
Floor Console (76.25.01)

Removal

- 1 . Remove the floor console upper panel. For additional information, refer to <u>Floor Console Upper Panel (76.25.11)</u>
- 2. Remove the cigar lighter assembly closing panel.


Release the 4 clips.

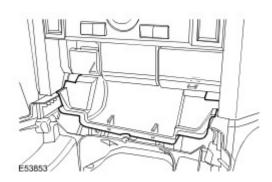

- 3. Release the floor console wiring harness and disconnect the 5 electrical connectors.
- 4 . Remove the floor console.
 - Move the front seats fully forwards.

Remove both rear Torx bolt covers.


Remove the 4 Torx bolts.

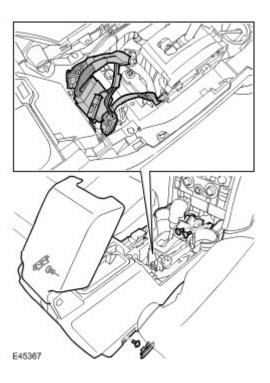


5 . NOTE:

Do not disassemble further if the component is removed for access only.


Remove the floor console lid.

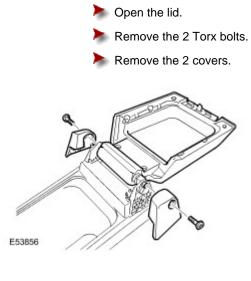



6 . Remove the floor console stowage compartment.

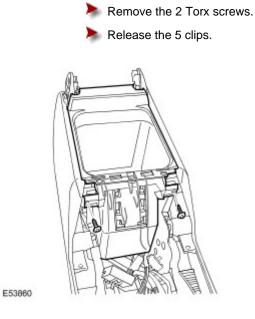



7 . Remove the auxiliary socket panel.

 

 

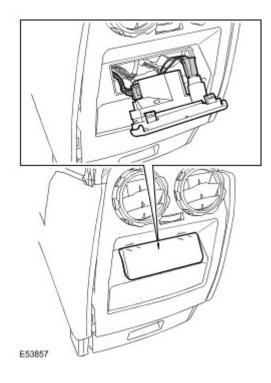


 

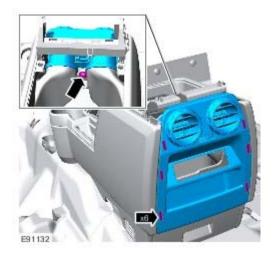


9 . Remove the cup holder.

Release the 2 clips.

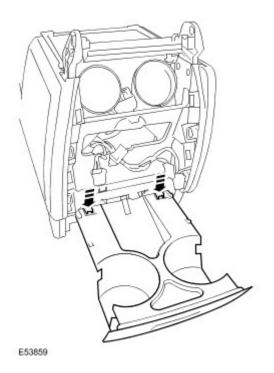

10 . Remove the wiring harness.

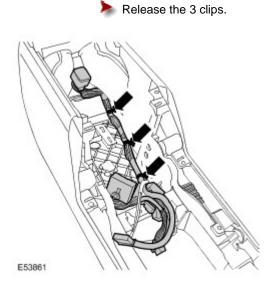

Installation

1 . Install the wiring harness.

Secure the clips.

- 2 . Install the cup holder.
 - Secure with the clips.
- 3. Install the floor console register trim panel.

Secure with the clips.

- Install the screw.
- 4 . Install the auxiliary socket panel.

- Sonnect the electrical connectors.
- Secure with the clips.
- 5. Install the floor console stowage compartment.
 - Secure the clips.
 - Tighten the Torx screws.
- 6 . Install the floor console lid.
 - Install the covers.
 - Tighten the Torx bolts to 3 Nm (2 lb.ft).
- 7 . Install the floor console.
 - Tighten the Torx bolts to 10 Nm (7 lb.ft).
 - Install the Torx bolt covers.
 - Connect and secure the electrical connectors.
- 8. Install the cigar lighter assembly closing panel.
 - Secure with the clips.
- 9 . Install the floor console upper panel. For additional information, refer to <u>Floor Console Upper Panel (76.25.11)</u>