

Ride and Handling Optimization Switch (86.65.11)

Removal

NOTE:

Automatic transmission shown. Manual transmission is similar.

1 .



WARNING: The gear lever knob will be released suddenly, keep face clear during removal.


Remove the selector lever knob.

▶ Pull the knob upwards.




2 . Release the ride and handling optimization switch assembly.

▶ Release the 4 clips.

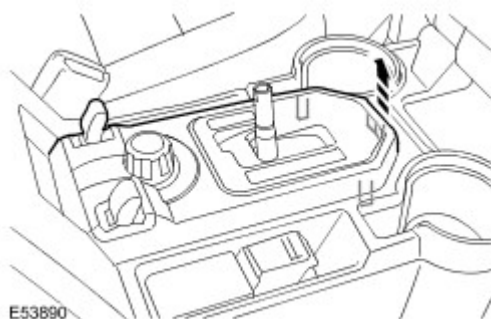

3 . Release the selector lever panel.

▶ Release the 4 clips.

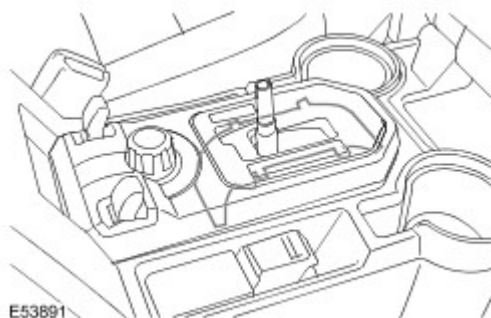


4 . Remove the ride and handling optimization switch assembly.

- ▶ Disconnect the 2 electrical connectors.




- 5 . Remove the selector lever panel.

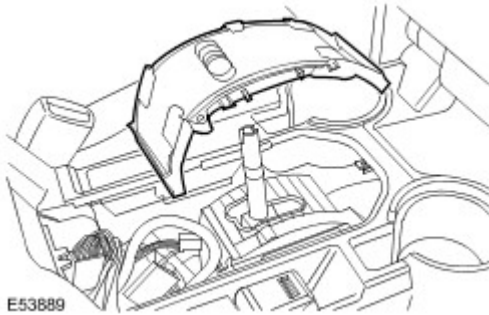

Installation

- 1 . Install the selector lever panel.
- 2 . Install the ride and handling optimization switch assembly.
 - ▶ Connect the electrical connectors.
 - ▶ Secure the selector lever trim panel.

- 3 .  **CAUTION: Only fit the selector knob when the selector lever is in the 'P' position.**

Install the selector lever knob.

- ▶ Engage the locating tang of the knob with the slot in the selector lever.
- ▶ Push the knob fully onto the selector lever.