



6.
 - Start the engine and allow to run for 10 minutes, stop the engine.
 - Check for leaks.

7. CAUTIONS:

 Make sure that the vehicle is parked on level ground.

 Make sure that the selector lever and the gearshift mechanism are in the park (P) position.

 Make sure that the hood is open.

 NOTE: Allow 10 minutes from the engine switch off for the engine oil level to stabilize.

- Turn the ignition on.

8.

- Press the right-hand directional button to access the instrument cluster menu.



E123926

9.

- Press the right-hand OK button.



E123925

10.

- Press the right-hand directional button to access the Oil Level Display.




E123927

11.

- Press the right-hand OK button and follow the instructions.



E123928

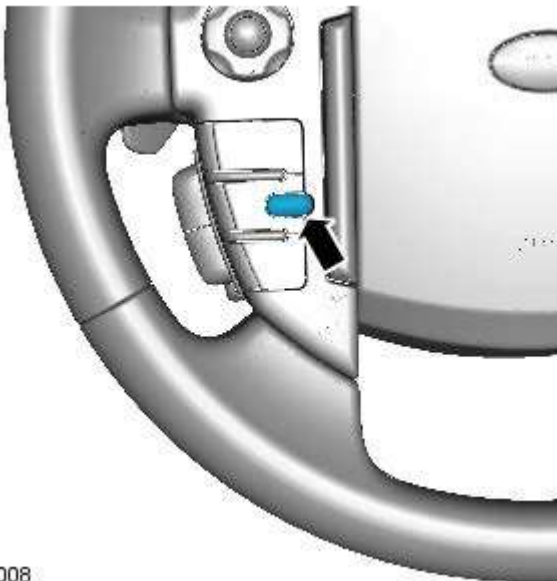


E121008

12.

- Press the cruise control cancel button twice within 2 seconds.

13.

- The message center display will revert to the normal display in the trip computer.
- Press the right-hand OK button and follow the instructions.
- Check that the oil level display shows an oil level reading.
- Only after having started and run the engine for 10 minutes, switch off the engine, then stabilizing for 10 minutes, take a reading from the oil level display and, if necessary top up with engine oil.

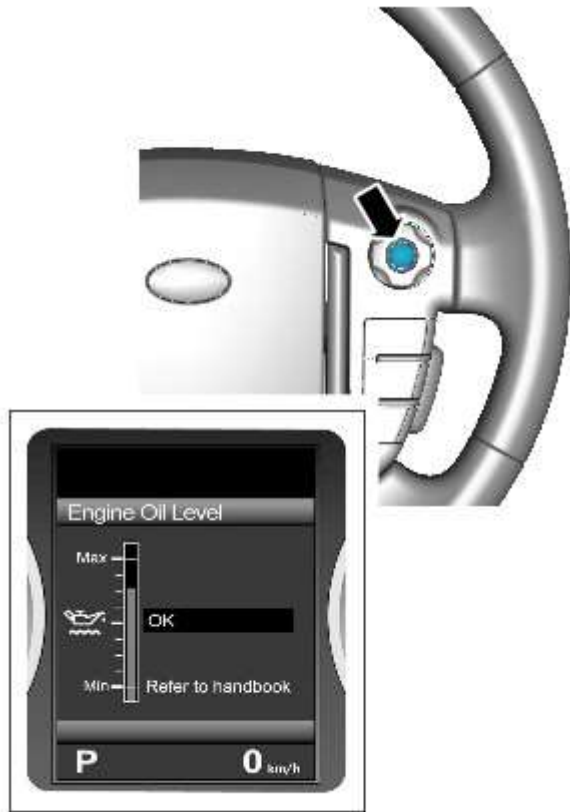

E123929

14. Turn the ignition off.

15.  **NOTE:** Allow 10 minutes for the engine oil level to stabilize if there has been additional oil top up.

Turn the ignition on.

16.

- Press the right-hand directional button to access the instrument cluster menu.



E123926

17.



E123925

- Press the right-hand OK button.



E123927

18.


- Press the right-hand directional button to access the Oil Level Display.

19.

- Press the right-hand OK button and follow the instructions.



E123928

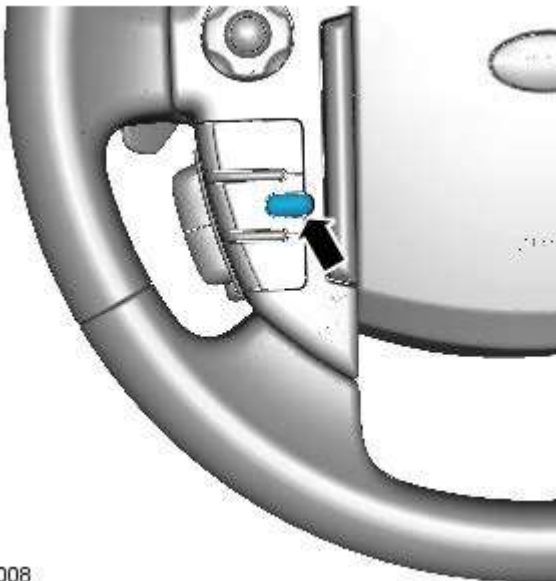

E121008

20.


- Press and hold the cruise control cancel button for more than 2 seconds.

21.




NOTE: Some variation in the illustrations may occur, but the essential information is always correct.

- The message center display will revert to the normal display in the trip computer.
- Press the right-hand OK button and follow the instructions.
- This display is now the live reading of the engine oil level.
- Take a reading from the level display and, if necessary, top up with oil as instructed.

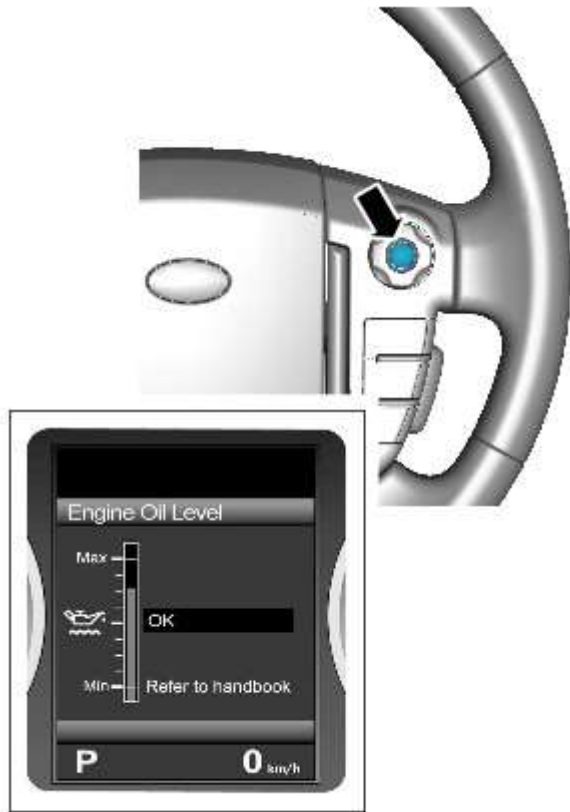

E123929

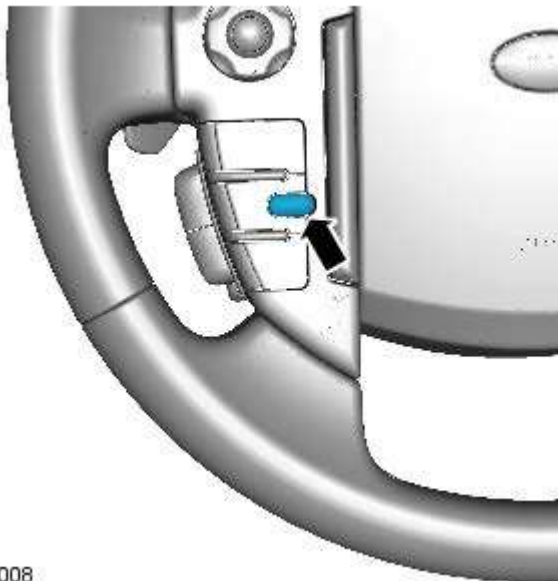

E121008

22.

- Press and hold the cruise control cancel button for more than 2 seconds.

23. The message center display will revert to the normal display in the trip computer.

24. Turn the ignition off.

25. Turn the ignition on.

26.

- Press the right-hand directional button to access the instrument cluster menu.



E123926

27.

- Press the right-hand OK button.



 
E123925

28.

- Press the right-hand directional button to access the Oil Level Display.



E123927

29.  **NOTE:** Some variation in the illustrations may occur, but the essential information is always correct.

- Press the right-hand OK button and follow the instructions.
- Make sure that the average oil level value has now been updated.



E123929

30. Refer to: Engine Cover - 3.0L V6 - TdV6 (501-05 Interior Trim and Ornamentation, Removal and Installation).