DISCOVERY 3 - LR3

- [+] 1:General Information
- [+] 2:Chassis
- [+] 3:Powertrain
- [+] 4:Electrical
- 🗀 5:Body and Paint
 🗀 501:Body and Paint
 - [+] 501-02: Front End Body Panel
 - [+] 501-03: Body Closures
 - [+] 501-05: Interior Trim and Ornamentation
 - [+] 501-08: Exterior Trim and Ornamentation
 - [_] 501-09: Rear View Mirrors
 - Specifications
 - **Specifications**
 - **Description and Operation**
 - **Rear View Mirrors**
 - **Diagnosis and Testing**

 - Rear View Mirrors
 Removal and Installation

 - Interior Mirror
 Exterior Mirror Glass
 - **Exterior Mirror**
 - [+] 501-10: Seating

 - †† 501-11: Glass, Frames and Mechanisms
 †† 501-12: Instrument Panel and Console
 †† 501-14: Handles, Locks, Latches and Entry Systems
 - [+] 501-16: Wipers and Washers
 - 1 501-17: Roof Opening Panel
 - [±] 501-19: Bumpers

 - + 501-20A: Safety Belt System
 + 501-20B: Supplemental Restraint System
 + 501-25A: Body Repairs General Information
 - [+] 501-25C: Body Repairs Corrosion Protection
 - [+] 501-25D: Body Repairs Water Leaks
 - [+] 501-26: Body Repairs Vehicle Specific Information and Tolerance Checks
 - [+] 501-27: Front End Sheet Metal Repairs
 - 1 501-28: Roof Sheet Metal Repairs
 - [+] 501-29: Side Panel Sheet Metal Repairs
 - 1 501-30: Rear End Sheet Metal Repairs
 - o [+] 502:Frame and Mounting

Exterior Mirror Glass (76.11.08)


Removal

- 1. Tilt the exterior mirror glass upwards.
- 2 . Release the exterior mirror glass.





- 3 . Remove the exterior mirror glass.
 - Release the glass from the motor.
 - Disconnect the 2 electrical connectors.

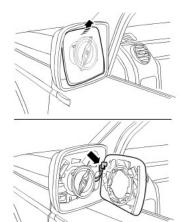

Installation

- 1. Install the exterior mirror glass.
 - Connect the electrical connectors.
 - Align the glass to the motor.
 - Apply an even pressure to secure glass to the clips.
- 2 . Check the operation of the exterior mirror.