





Cool Box

Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the floor console upper panel. For additional information, refer to [Floor Console Upper Panel \(76.25.11\)](#) (Section 501-12)
3. Remove the floor console lid.
 - ▶ Open the lid.
 - ▶ Remove the 2 Torx bolts.
 - ▶ Remove the 2 covers.

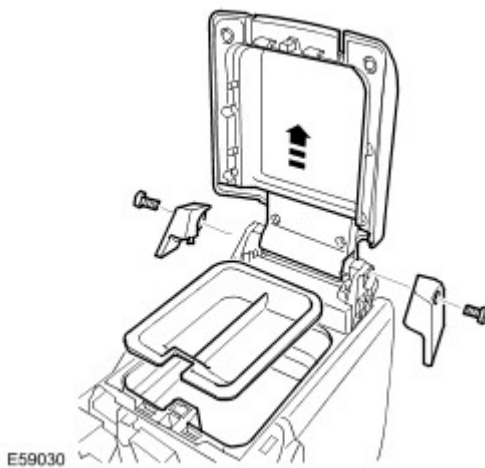

4. Remove the floor console cool box.
 - ▶ Remove the 2 Torx screws.
 - ▶ Disconnect the electrical connector.

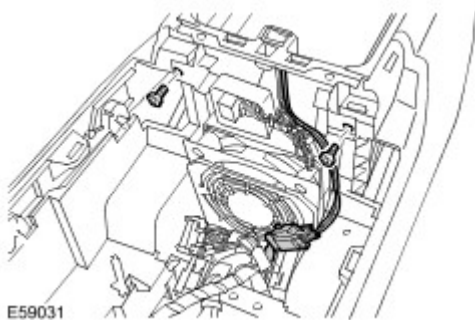

Installation

1. Install the floor console cool box.

- ▶ Connect the electrical connector.
 - ▶ Tighten the screws.
- 2 . Install the floor console lid.
- ▶ Install the covers.
 - ▶ Tighten the Torx bolts to 3 Nm (2 lb.ft).
- 3 . Install the floor console upper panel. For additional information, refer to [Floor Console Upper Panel \(76.25.11\)](#) (Section 501-12)
- 4 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)