



## Air Suspension Compressor Drier (60.50.09)

### Removal

1.  **WARNING :** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

2. Remove the air suspension compressor.  
For additional information, refer to: Vehicle Dynamic Suspension, 204-05.

3.  **CAUTION :** Before disconnecting or removing the components, ensure the area around the joint faces and connections are clean and dry. Plug open connections to prevent contamination.


Disconnect the air line from the air suspension compressor drier.

- ▶ Release the air line from the retaining clip.

4. **NOTE :**  
If equipped, note the position of the air suspension compressor retaining cable.

Remove the air suspension compressor drier.

- ▶ Remove the retaining screw.
- ▶ Remove and discard the O-ring seal.

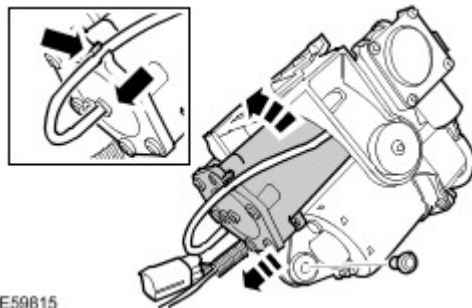


### Installation

1. Install a new O-ring seal.
  - ▶ Lubricate the O-ring with a lithium based grease.

2. **NOTE :**  
If equipped, make sure the air suspension compressor retaining cable is correctly routed around the compressor cylinder head.

Install the air suspension compressor drier.

- ▶ Install the retaining screw and tighten to 3 Nm (2.2 lb.ft).

3.  **CAUTION :** Visually inspect the air line ends for damage or wear. Replace the air line as

necessary.



**CAUTION : Pull on the air line to make sure it is securely intalled in the connector.**

Connect the air line to the air suspension compressor drier.

▶ Attach the air line to the retaining clip.

- 4 . Install the air suspension compressor.  
For additional information, refer to: Vehicle Dynamic Suspension, 204-05.