PN ×

Published: May 25, 2004

Rear Bumper Cover (76.22.74)


Removal

All vehicles


1. WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

- 2 . Remove both rear lamp assemblies. For additional information, refer to Rear Lamp Assembly (86.40.70) (Section 417-01)
- 3 . Remove both rear quarter panel mouldings. For additional information, refer to Rear Quarter Panel Moulding (76.43.55) (Section 501-08)
- 4. Remove 4 scews, 2 clips and 2 bolts from the rear bumper cover.

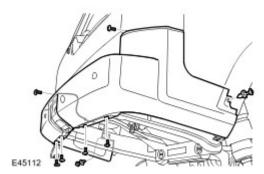


- 5. With assistance, remove 4 clips from the inner edge of the bumper cover.
 - Tilt the tailgate for access.
 - Open the tailgate hinge cover.

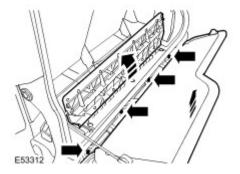

- 6. Remove the rear bumper cover.
 - Release from the 12 clips.
 - If installed, disconnect the parking aid sensor wiring harness electrical connector.


Rear Bumper Cover Page 2 of 4

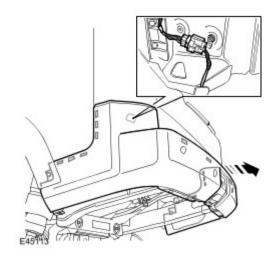

7. NOTE:


Do not disassemble further if the component is removed for access only. Remove the towing eye cover.

Remove the 2 screws.

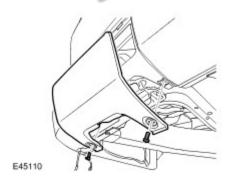

8. Remove the rear bumper trim panel.

Release the 11 clips.

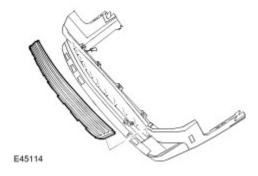

9. Remove the bumper insert.


Remove the 3 screws.

Vehicles with parking aid

1. Remove the parking aid sensor wiring harness.

Rear Bumper Cover Page 3 of 4

Disconnect the 4 electrical connectors.

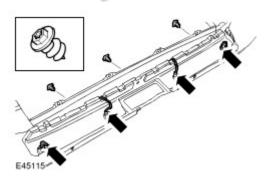

Vehicles with parking aid


- 1. Remove the parking aid sensor.
 - Release the 2 clips.
 - Repeat the above procedure for the remaining 3 sensors.



E45116

Vehicles with parking aid

- 1. Remove the parking aid sensor trim panel.
 - Release the 3 clips.
 - Repeat the above procedure for the remaining 3 sensor trim panels.

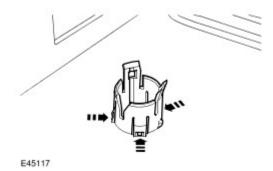

Installation

Vehicles with parking aid

1.

Rear Bumper Cover Page 4 of 4

Install the parking aid sensor trim panels.

Vehicles with parking aid

1. Install the parking aid sensors.

Vehicles with parking aid

- 1. Install the parking aid sensor wiring harness.
 - Connect the electrical connectors.
- 2. Install the bumper insert.
 - If installed, secure the parking aid sensor wiring harness.
 - Tighten the screws.
- 3. Install the rear bumper trim panel.
- 4. Install the towing eye cover.
 - Tighten the screws.
- 5. Install the rear bumper cover.
 - If installed, connect the parking aid sensor wiring harness electrical connector.
 - Secure with the clips.
 - Tighten the screws.
 - Tighten the bolts to 10 Nm (7 lb.ft).
- 6. Install both rear quarter panel mouldings. For additional information, refer to Rear Quarter Panel Moulding (76.43.55) (Section 501-08)
- 7. Install both of the rear lamp assemblies. For additional information, refer to Rear Lamp Assembly (86.40.70) (Section 417-01)