




Front Wiper Pivot Arm (84.15.02)

Removal

1. Noting the fitted position, remove the front wiper pivot arm.
 - ▶ Remove the nut cover.
 - ▶ Remove the nut.
2. **NOTE :**
Do not disassemble further if the component is removed for access only.
Remove the wiper blade.
 - ▶ Release the clip.

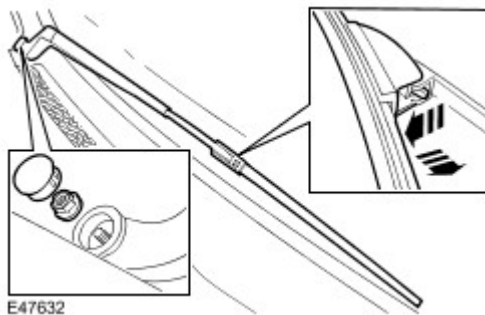

Installation

1. To install, reverse the removal procedure.
 - ▶ Tighten the nut to 18 Nm (13 lb.ft).