





Windshield Washer Reservoir (84.10.03)

Removal


1. Remove the front bumper. For additional information, refer to [Front Bumper \(76.22.49\)](#) (Section 501-19)
2. Remove the windshield washer reservoir filler neck.
 - ▶ Release the washer reservoir filler neck from the coolant tank clip.
 - ▶ Remove and discard the seal.

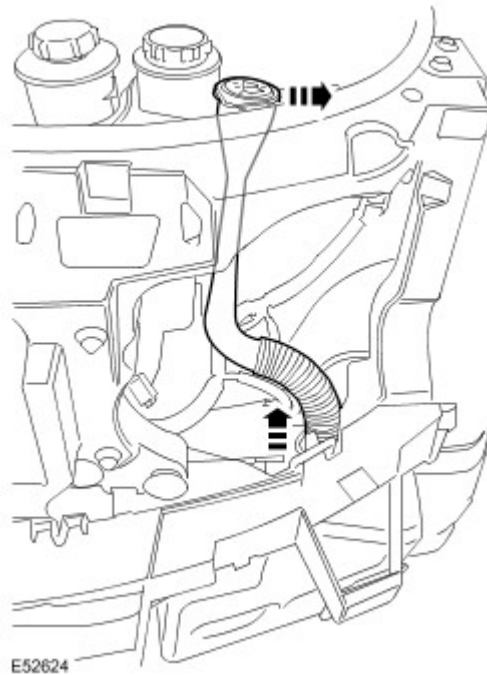

3. **NOTE :**
Some fluid spillage is inevitable during this operation.
Remove the windshield washer reservoir.
 - ▶ Remove the bolt.
 - ▶ Drain the washer reservoir fluid.
 - ▶ Disconnect the 3 electrical connectors.
 - ▶ Disconnect the 3 hoses.

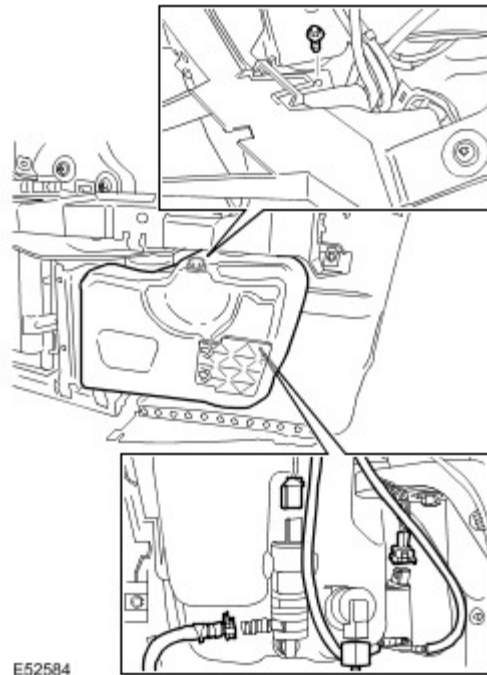

4. **NOTE :**
Do not disassemble further if the component is removed for access only.
Remove the windshield washer pump.
 - ▶ Discard the O-ring seal.
5. Remove the headlamp washer pump.
 - ▶ Discard the O-ring seal.

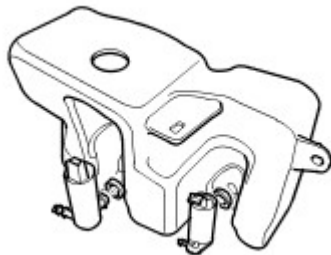

Installation

1. Install the windshield washer pump.
 - ▶ Install a new O-ring seal.
2. Install the headlamp washer pump.
 - ▶ Install a new O-ring seal.
3. Install the windshield washer reservoir.

- ▶ Connect and secure the electrical connectors.
 - ▶ Connect the hoses.
 - ▶ Install the bolts and tighten to 6 Nm (4 lb.ft).
- 4 . Install the windshield washer reservoir filler neck.
- ▶ Lubricate the seal.
 - ▶ Secure in the clip.
- 5 . Install the front bumper. For additional information, refer to [Front Bumper \(76.22.49\)](#) (Section 501-19)